


## Rinaldo Chair Assembly Instructions


The following instructions apply to the Plydea Rinaldo Chair. Note that parts are called out in red. If you have any questions, please feel free to contact us at [plydea.com](http://plydea.com)!

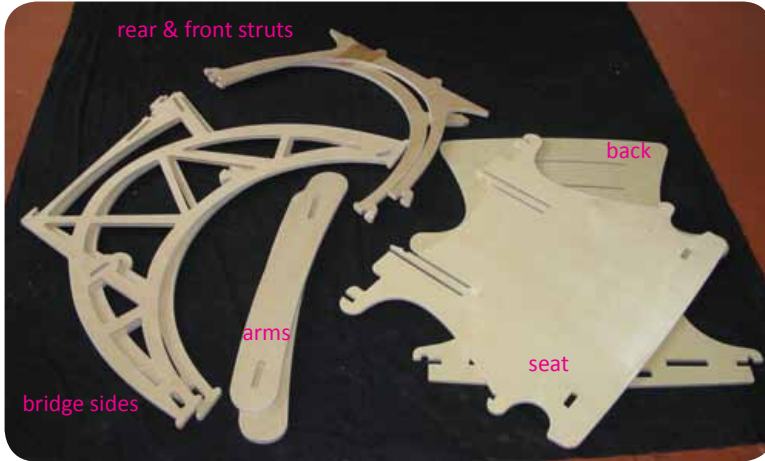

### Pic 1


Use two hands for eight parts:

- 2 bridge sides
- 1 rear strut
- 1 front strut
- 1 back
- 1 seat
- 2 arms

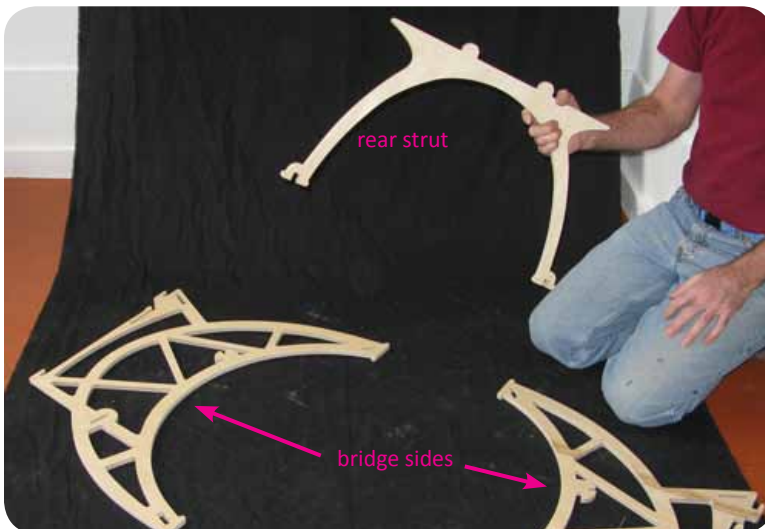


### Pic 2

Choose the **bridge** faces you want to be the out-sides of the chair + lay them face down - grab the **rear strut** + select the face you want to show to the rear.

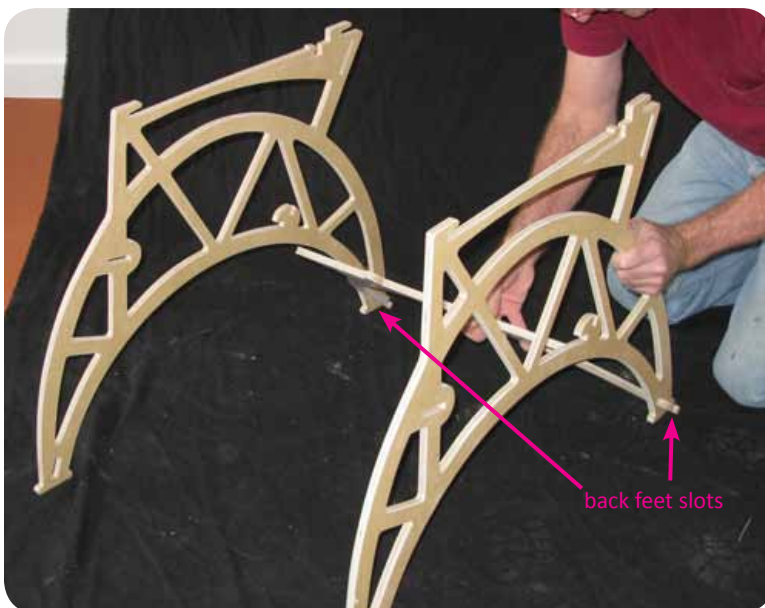


### Pic 3

engage **rear strut** feet into **bridge side** back feet slots.

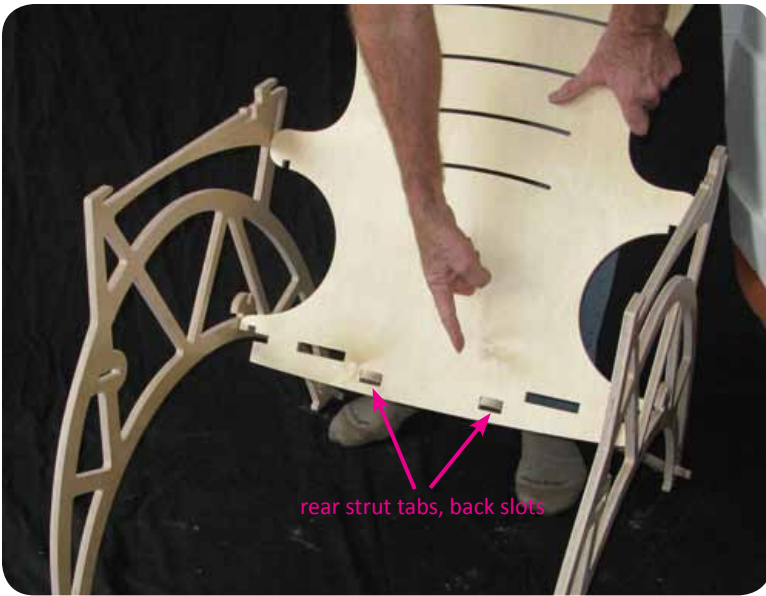


**Pic 4**

choose the face of the **back** you want to sit in and place thus, engaging the tabs on that **rear strut** into the bottom most slots in the **back**.

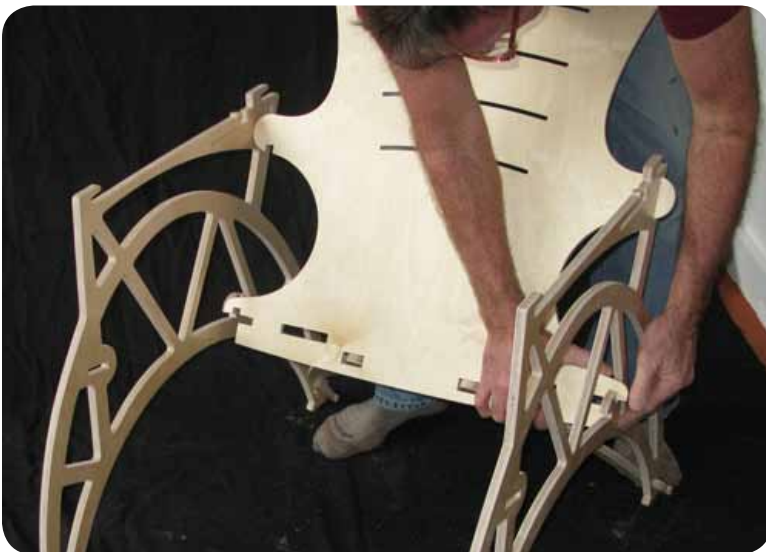

**Pic 5**

guide both tabs of each **back's** side into their receiving slots and press down simultaneously and fully.

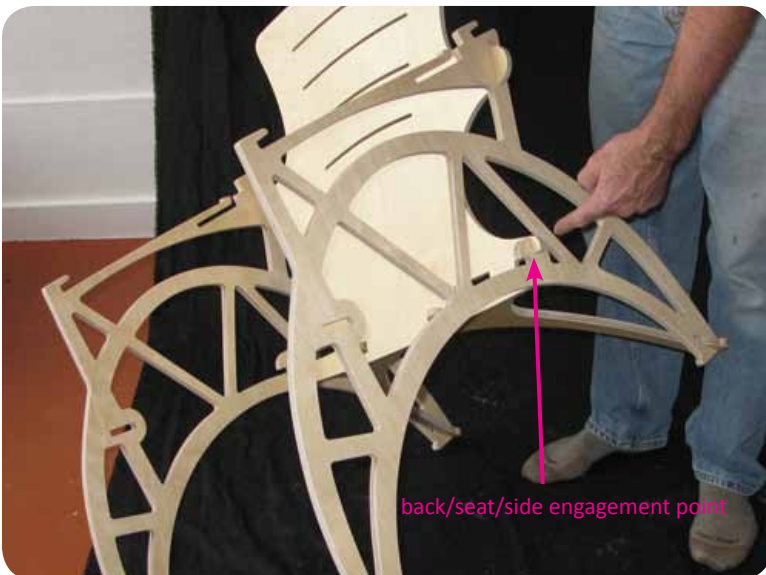

**Pic 6**


showing the **back** installed and pointing to the back/seat/bridge side engagement point- which is where the **seat** will engage too...



**Pic 7**


take a break... here comes the tricky part.


(Don't try sitting in your chair yet for your break)

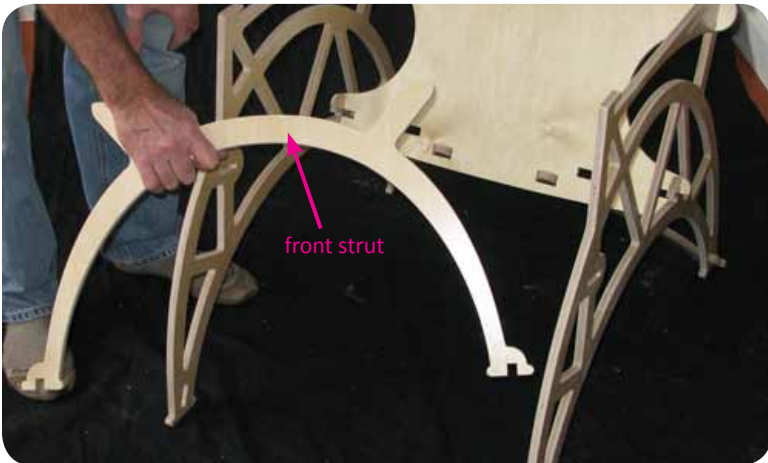

**Pics 8 & 9**

grasp the **front strut** and engage its feet into the **bridge side** front feet slots. Remember, best face forward.

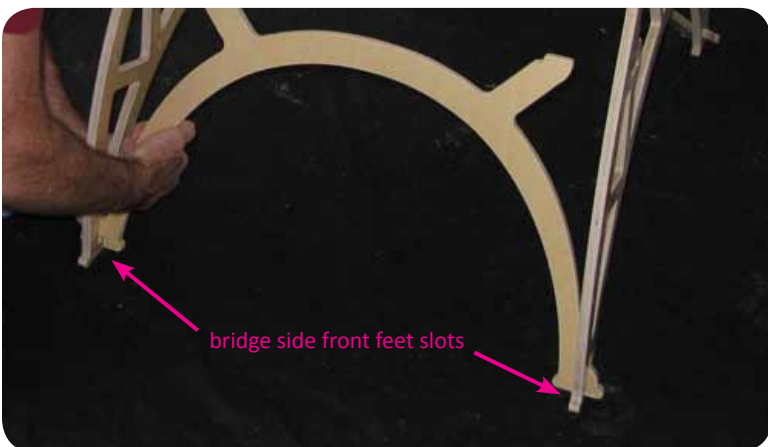

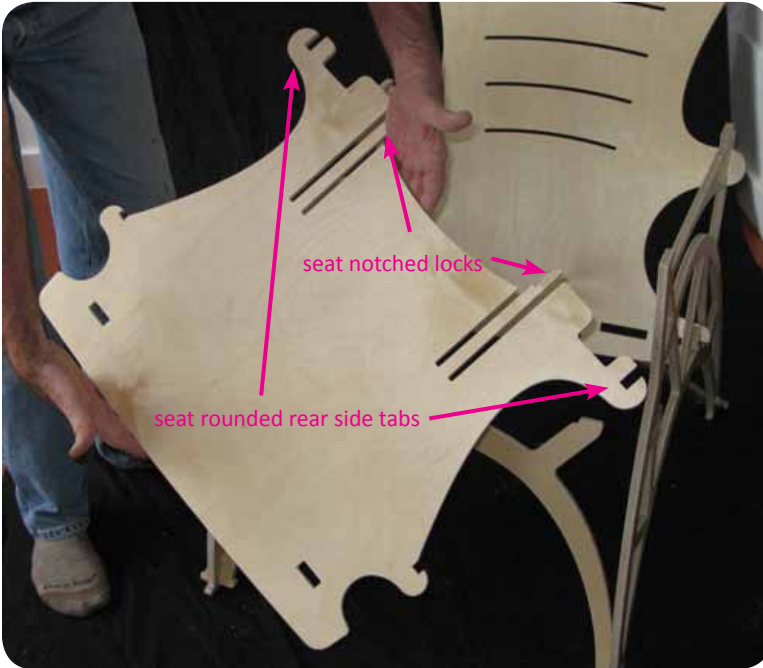


**Pic 10**

with the best face up and noting the **seat** rounded rear side tabs and **seat** notched locks, one of which is obscured by my left hand.



**Pic 11**

insinuate the **seat** rounded rear side tabs into the triangular openings on each **bridge side** *aligning them* with their receiver slots. Don't push in yet. You will have to spread the **bridge sides** a little for the **seat** front side tabs to achieve this...

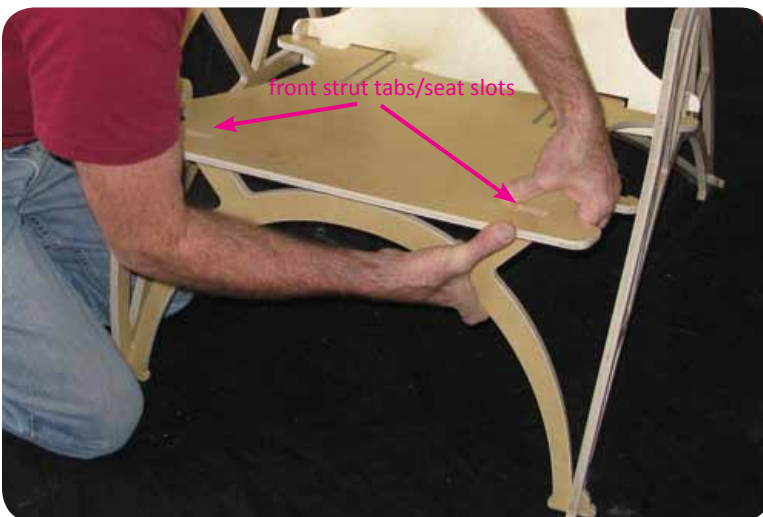

**Pic 12**


with the **bridge sides** spread and the **seat** front tabs near the **bridge side** seat slots – gently pull the **front strut** until its tabs engage their slots near the front edge of the **seat**. **Keep your fingers clear as these will snap in with some force.**



**Pic 13**

slowly and cautiously engage the **seat** front tabs into the **bridge side** seat slots... **caution parts under tension.**

Note projections with **seat** notched locks will penetrate the chair **back**. Ensure alignment of all tab and slots and push the front edge of the **seat** towards the **back** until...

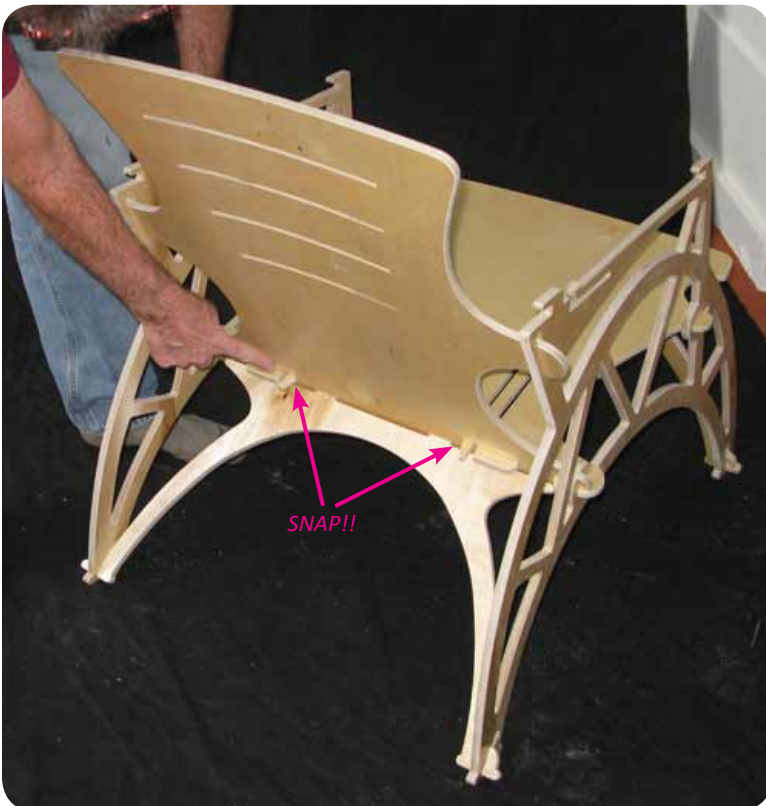

**Pic 14**

**SNAP!** ...the **seat** notched locks snap to the **back**. This locks your chair together -- you must ensure positive engagement.



**Pic 15**

arms - best sides up, longer slots to the back



**Pic 16**

engage and push toward front of chair



**Pic 17**

until the locks er... lock

repeat on the other side



**Pic 18**

Sit ye downe.

Enjoy your Rinaldo Chair!

Send us your thoughts:  
[feedback@plydea.com](mailto:feedback@plydea.com)

...and please go onto [plydea.com](http://plydea.com) to give us a rave review!